

# ***1      Firmware Over The Air (FOTA)***

---


This section outlines the Firmware Over The Air (FOTA) process including

- Client Initiated FOTA
- FOTA Up-To-Date

## **1.1 Client Initiated FOTA**

1. Click on Settings->About Phone->System Updates->Update From OTA. Then touch Check for Updates.


**Figure 1: FOTA - System Updates and Software Update Display**

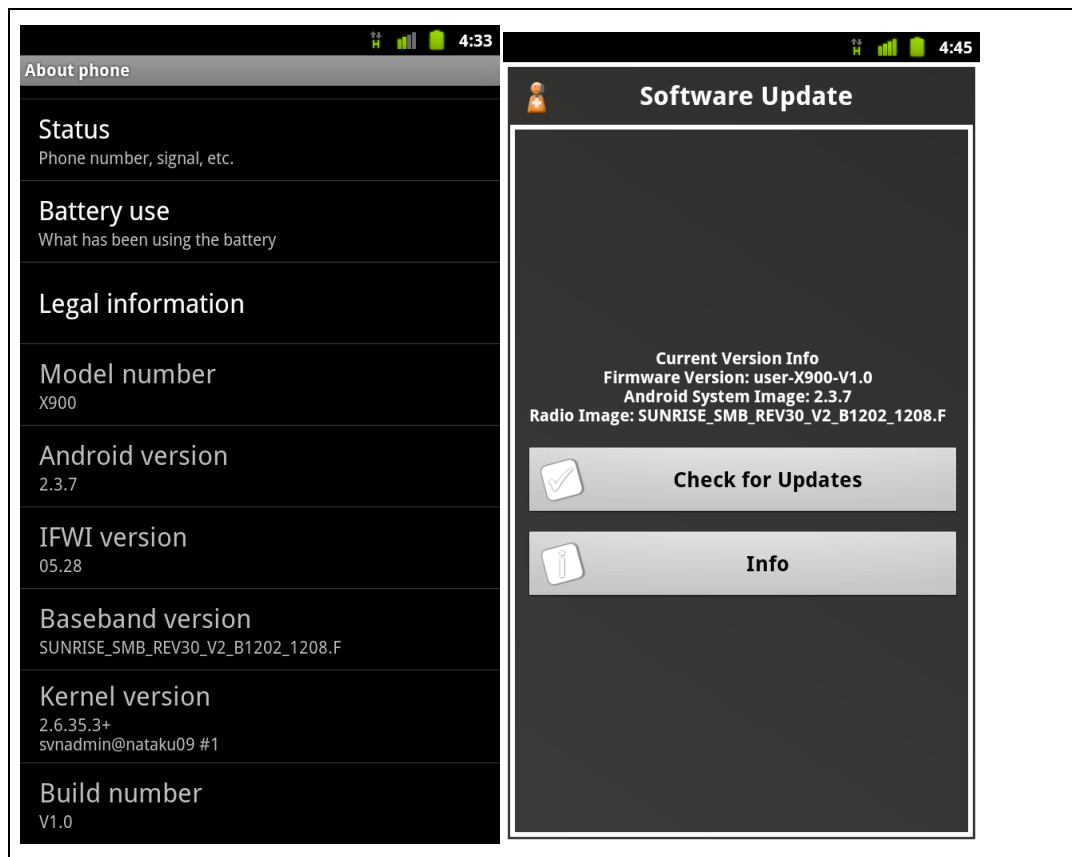

## ***Firmware Over The Air (FOTA)***

2. The Phone checks for updates by displaying the Progress Screen
3. If software is available, the Phone displays the "New Software Available". Select Begin Downloading.


**Figure 2: FOTA - Progress and New Software Available Display**

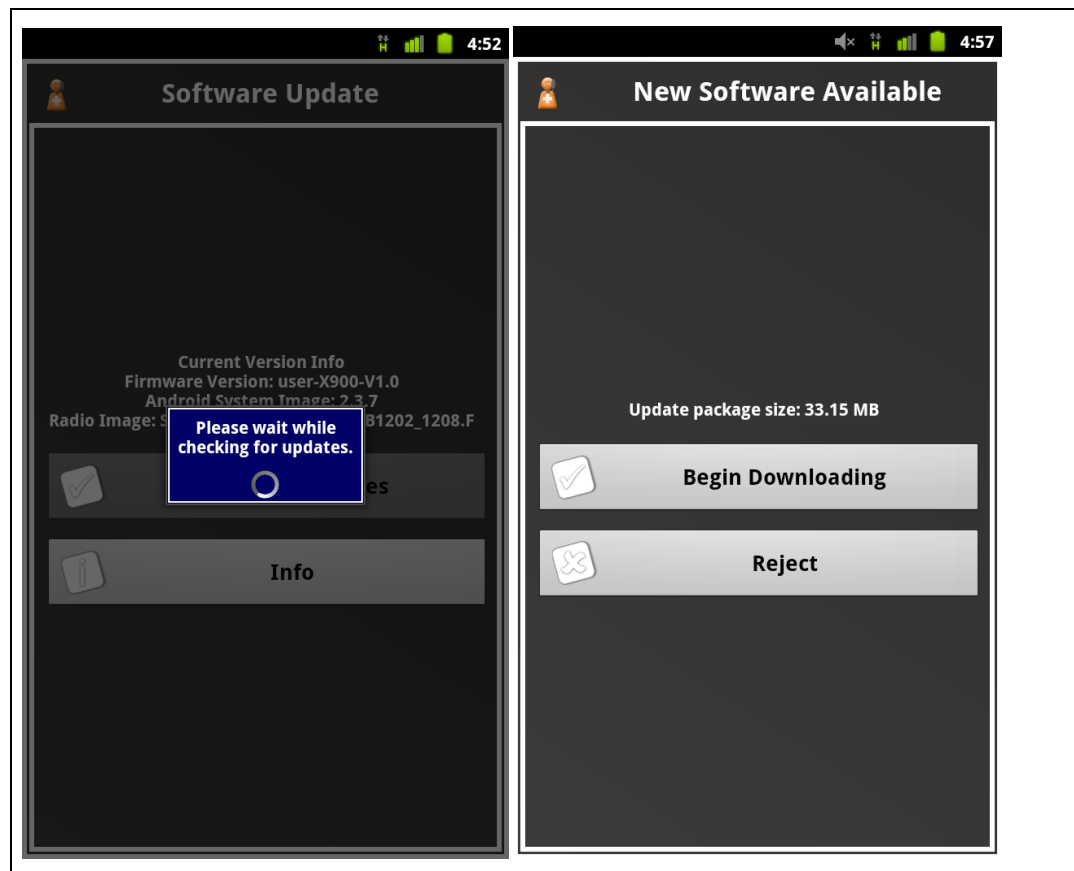

## ***Firmware Over The Air (FOTA)***

4. The Software Download notification displays. Touch OK to proceed to download.
5. The Notification screen is displayed. Indicating percentage of update.


**Figure 3: FOTA - Software Download and Download Progress Display**

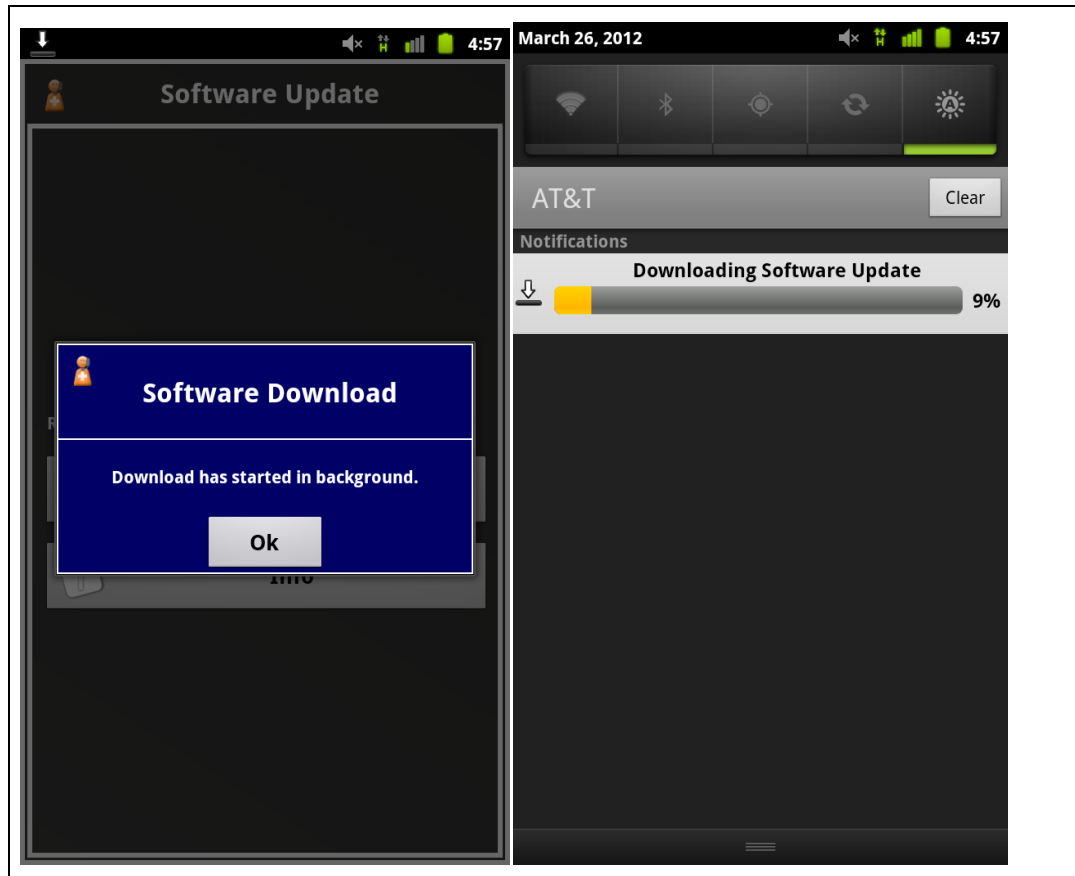

## ***Firmware Over The Air (FOTA)***

6. Once update is downloaded, Touch Apply Update to proceed with FOTA. Or Remind Me Later option can be initiated.


**Figure 4: FOTA - Apply Update Display**

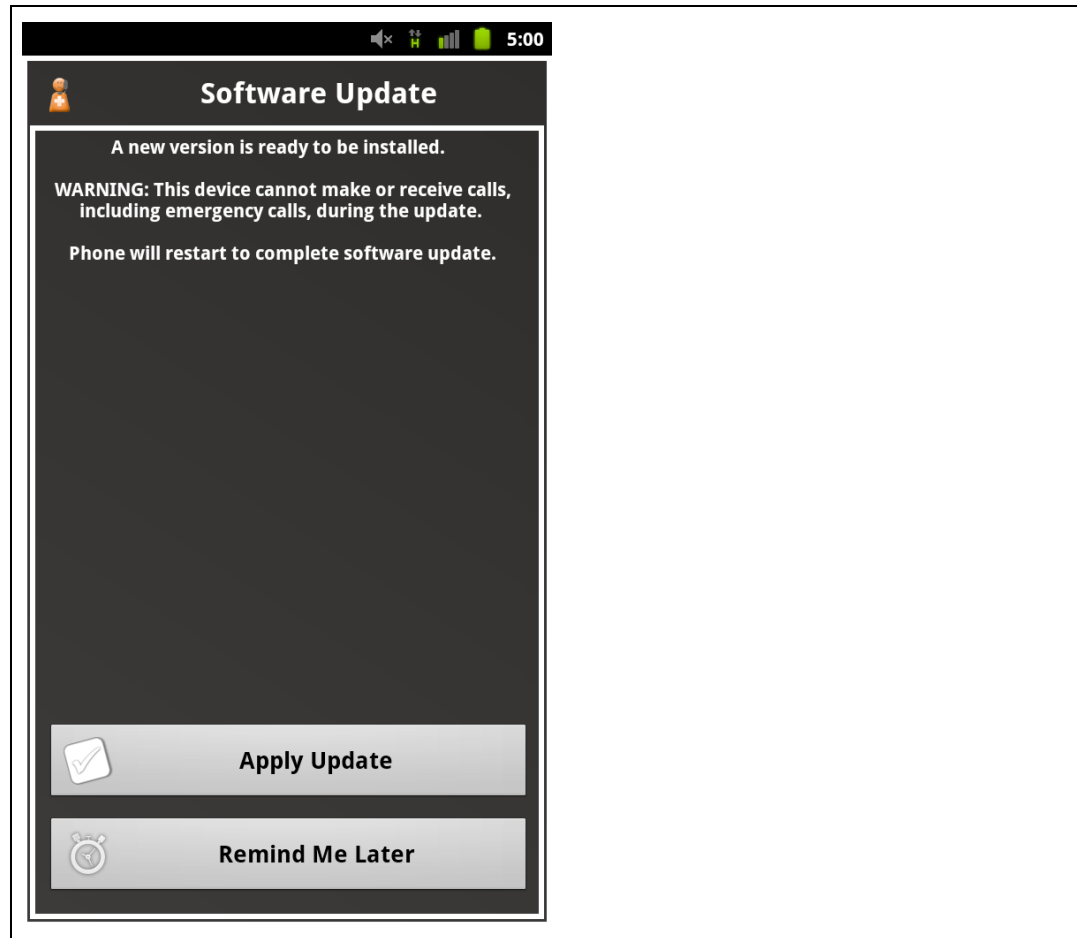

## ***Firmware Over The Air (FOTA)***

7. Once the update is applied, the update sequence is initiated: Power Off, Recovery, Flashing and Reboot

**Figure 5: FOTA - Update Sequence and Install Complete Display**

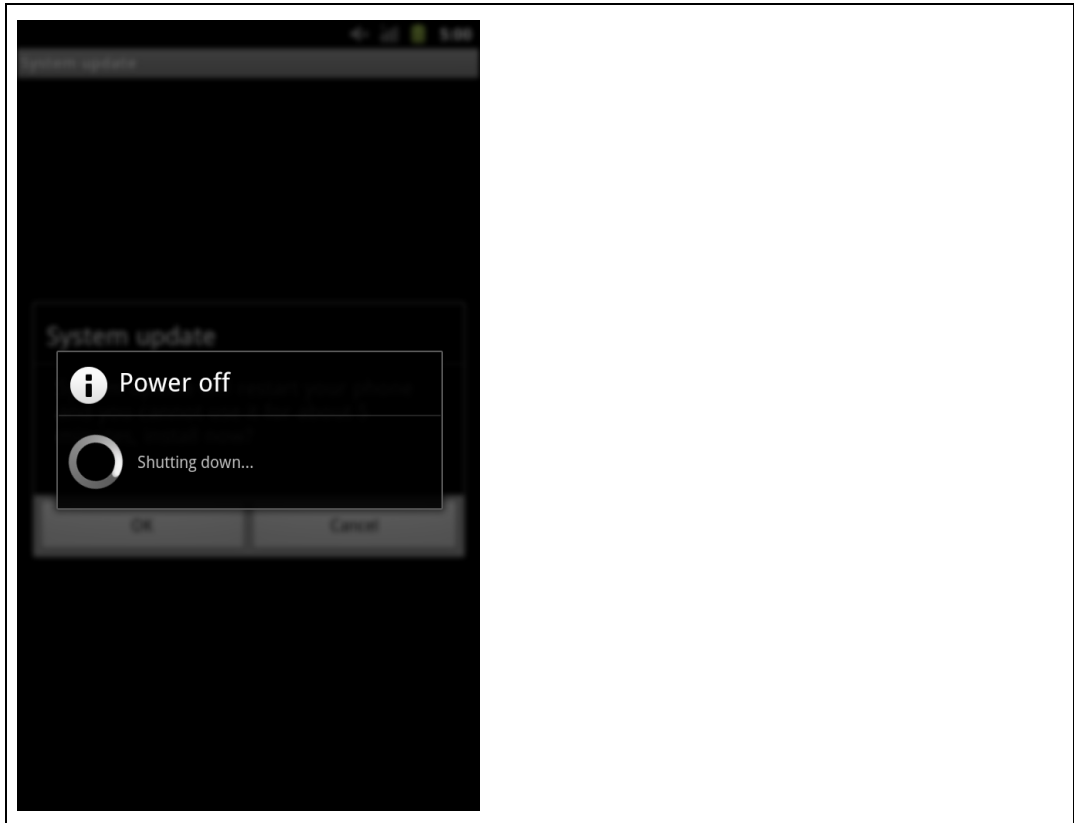

## ***Firmware Over The Air (FOTA)***

### **1.2 Software Up-To-Date**

1. Click on Settings->About Phone->System Updates->Update From OTA. Then touch Check for Updates.
2. No Update Available displays when the device is current.

**Figure 6: FOTA - Check For Updates and No Updates Available Display**

